

**Changing of Standard Flat Fan Spray Tip to Triple Head Tip set up.**

Step 1 – Remove the existing Spray tip.

Remove this tip



w/ Socket or Shifter.



Clean Inside of thread



Step 2 – Fit new 'Male Core'.

Use a liquid type thread sealant – e.g. -'Loctite / Locseal / plumbers goo. Use a 6mm Allen Key to fit.

IMPORTANT – Fit Bumper back on the gun first before fitting male core.



Step 3 – Choose the spray tip / head you require.

 
Hand screw on the spray tip / head you want to use and give it a slight nip up with shifter.



This wall Holder & tool available -Pt. No. **GTSH-T**



1 - Shower Spray (***fitted to Gun***)



WELS Tested Flow Rates- 5.56lpm / 6 star

2 - Flat Fan Spray



WELS Tested Flow Rates- 1.17lpm / 6 star

3 - Straight Pulse Jet Spray



WELS Tested Flow Rates- 3.09lpm / 6 star