




**HOW to Service a Global Pre-Rinse Spray Gun**

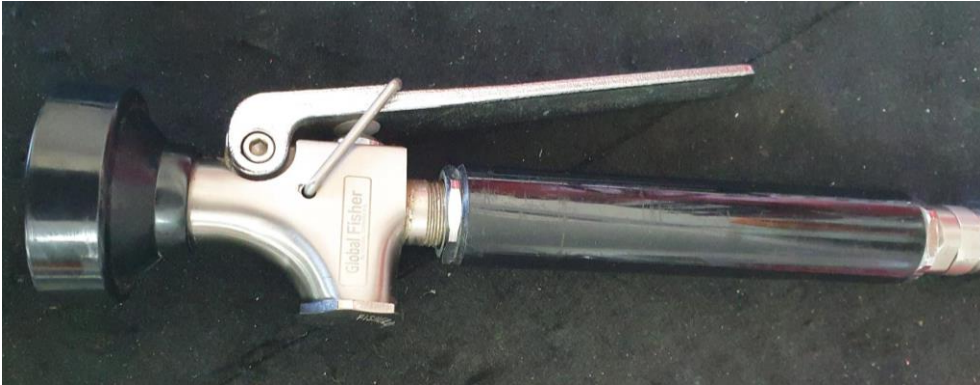


STEP ONE (1) - Unscrew the Hex Male underside of squeeze lever. **CAUTION** - this is spring loaded.



STEP TWO (2) -

Carefully remove components. Clean / Flush out inside and Jumper or replace all parts supplied in repair kit bag.

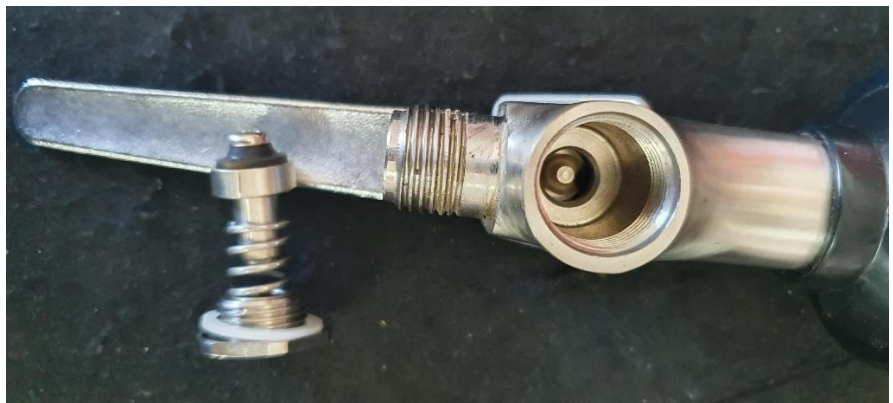

STEP THREE (3) – Do reverse process to assemble. Push Hex Male against the spring and turn to screw into body. Tighten up tightly.

