


HOW TO FIX:-

When the Pre-Rinse Hose Armour-flex starts to come apart / unwind.

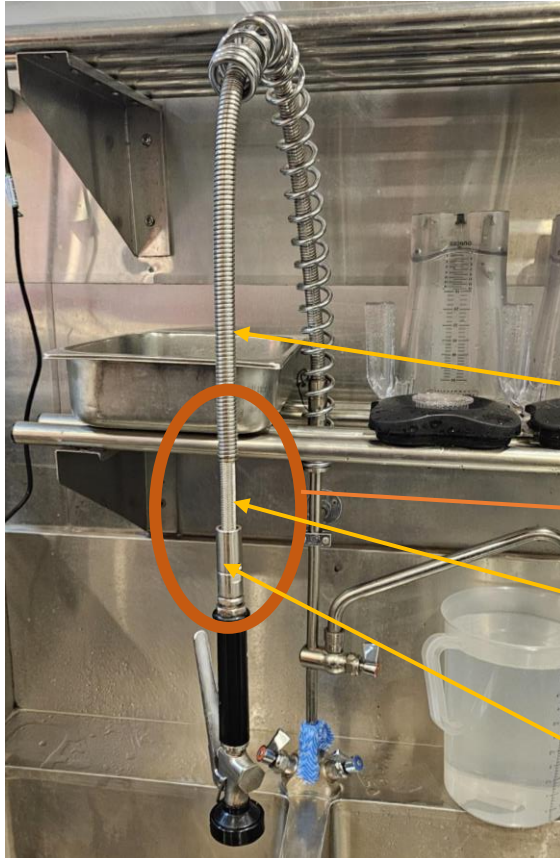


Armour-flex has unwound from the fitting and has exposed the S/S Braided Hose inner Tube.

NOTE – THIS MUST BE FIXED STRAIGHTAWAY

Armour-Flex

S/S Braided Hose

S/S Ferrule

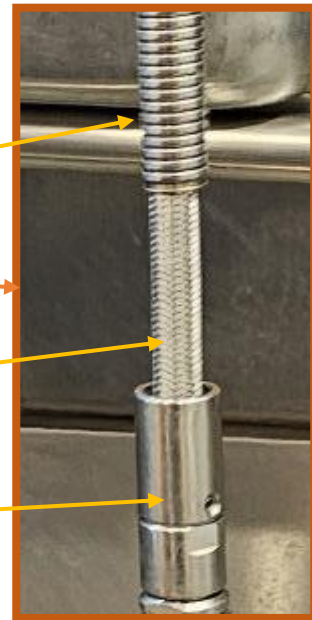

Step One - Turn Water Off and Squeeze Gun Trigger to let water out. This depressurizes the hose.

Step Two – Grad the Armour-Flex Hose and wind it up tight by rotating it ‘Anti-Clockwise’. This will make the gap bigger. You may also need someone to hold the Braided hose as this must stay as it is and not twist.

Step Three - Once the Armour-flex is wound up tight, slide it down to the top of the ferrule. Carefully and SLOWLY – let it start to unwind itself. Once you feel it move freely let it go.

NOTE – There are teeth inside this ferrule for the hose to grab onto.

MONITOR this situation – **Check regularly** that it does not occur. If it does re-occur, look for the reason. In this case the spring and hose were jammed up hard to the underside of the shelf, thereby restricting its movement and cause the armour-flex to unwind over a period of time. We ended up changing the Sub Assembly Riser to an Height Adjustable one.

This is NOT a Warranty Issue, but an installation issue.

This does not happen unless other forces cause it.