



## GS03 Installation Instructions


Manufacturers of Quality Commercial Tapware

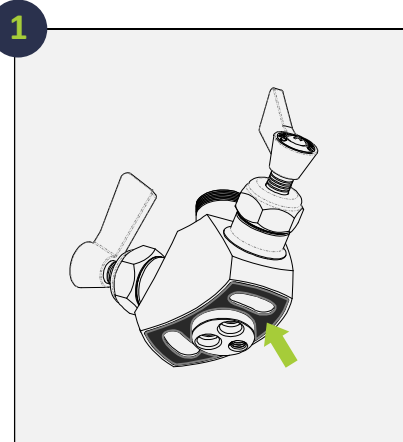


Check if the fibre mat is installed. If missing, silicone can be used as a substitute.

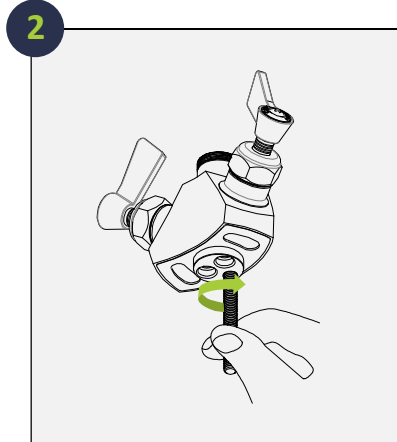


Add thread sealant and screw the threaded rod into the tap body.

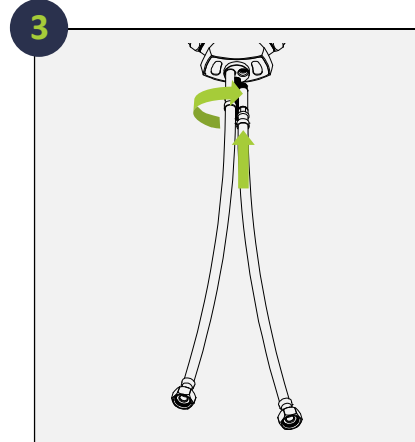


Attach inlet hoses.

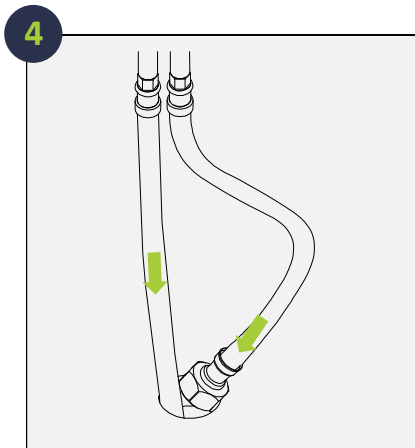


Insert hoses through the mounting hole. One first, then the other.

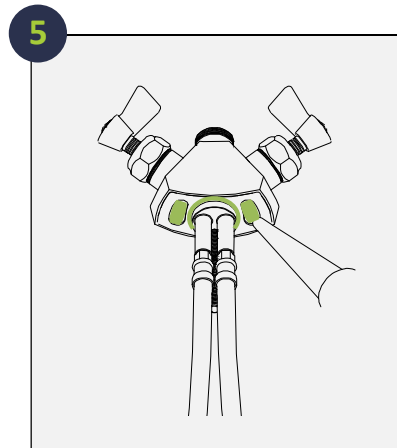

Add silicone to the holes in the fibre mat (make sure it sticks out above the mat) and around the mounting hole (if desired), before placing the tap over the hole.

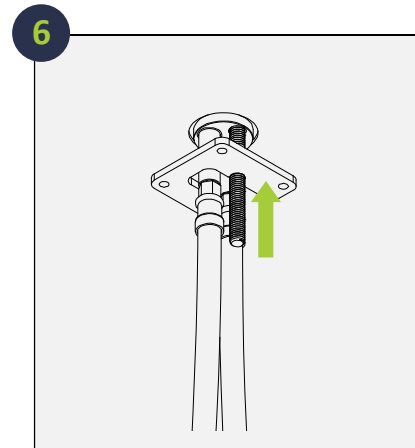


Slide up mounting plate over threaded rod.

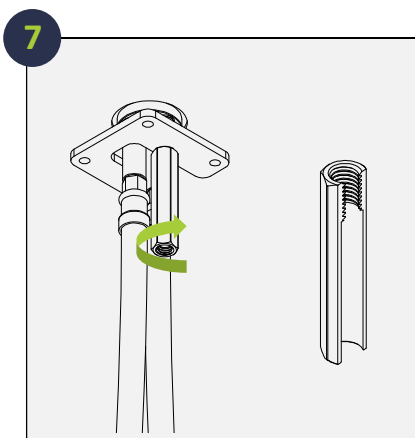


Loosely screw on the brass nut.

Note: the nut only has thread at one end. If the bench is thin, the threads can be oriented away from the tap body to reduce the amount of turns required to tighten the nut.

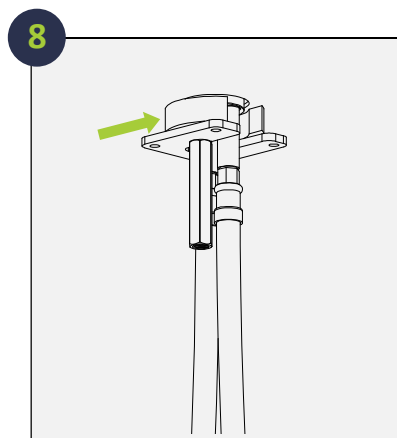

If the mounting surface is less than 6mm thick, slide in the slotted packer. If the mounting surface is thicker than 6mm, the packer is not required.

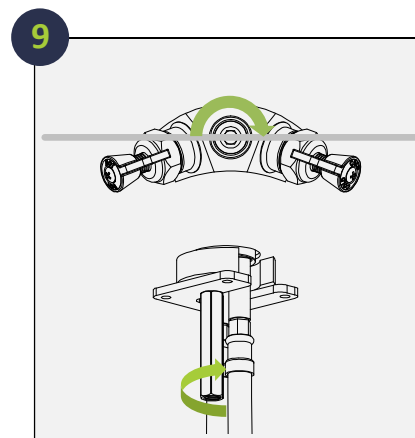

Make sure the tap body is aligned correctly then tighten the brass nut. Clean up any excess silicone.